

The REB1100 icons

Your REB1100 has 5 icons you will use to perform various functions. Here is a description of each icon and their menus, and “How to” instructions for a number of tasks.



The Page Orientation icon

The Page Orientation icon is used for two functions: changing the alignment of the text and recalibrating the touch screen.

To change the alignment of the text:

1. Click on the Page Orientation icon.
2. Four arrows will appear on your screen. Click on the arrow pointing the direction where you want the TOP of the text to appear.
3. The title will be reformatted and displayed in the direction you chose.

To recalibrate the touch screen:

1. Click on the Page Orientation icon.
2. A target will display in the middle of your screen. Click on it.
3. Click in the other targets as instructed. Your REB1100 screen will then be recalibrated!



The Bookshelf icon

The Bookshelf icon provides menu items for tasks related to your REB1100. There are three parts:

The top part of menu displays the four most recently viewed titles. The title that is currently open will be checked. Click any title to open it.

The middle part of the menu includes the bookshelves. The two menu choices are:

eBook Shelf: This provides information about titles loaded in your REB1100. The four choices in this menu are:

Books: Displays a list of the titles on the REB1100. You can do the following things with the titles from this window:

Open: To open a title:

1. Click on the title to open.
2. Click the “Open” button. The title will open.

Find: This allows you to find a word or phrase in the titles of the eBooks. This is NOT a full-text search of the eBooks. To find:

1. Click “Find.”
2. Type or write the term to search.
3. Choose “Forward” or “Back” to search for the term.

Delete: This will remove a title from your REB1100. The title will still be available through your Gemstar account or through the eBook Librarian software. To delete a title:

1. Click on the title you want to delete from the REB1100.
2. Choose “Delete.”
3. You will be asked to confirm the delete. Choose “Yes” and the title will be removed.

New stand: Displays subscription titles. This will probably be empty.

Catalogs: Displays a list of Gemstar catalogs on the REB1100. You can do the same things with the catalogs as outlined above for “Books.”

Order Form: Displays titles selected for purchase, but not yet sent to Gemstar. The order form keeps items you’ve selected from various Gemstar catalogs and allows you to send the order at a later time. There are two functions you can do from this screen.

Billing Information: Click this to input or display credit card information.

Send Order: Click this to complete the order and send to Gemstar.

Online Bookshelf: The Online Bookshelf displays titles stored at your Gemstar account. You must have the phone line connected to your REB1100 before using this menu. The two choices available from here are:

All Titles: This will display all of the titles available to your at Gemstar, and allow you to download any of these titles. Both titles you’ve purchased and title catalogs from Gemstar will be available. To download any of this content:

1. Click "All titles." The modem will dial, and you will see a series of messages.
2. A list of available titles will display. Put a check in the box next to the titles you want to download.
3. Click "Download now." You'll receive a "Preparing this title for you" message, and then a downloading message, and then the title will appear in your REB1100.

New Titles: This will display any content available in your account that you have not yet downloaded. Clicking on this item will connect to your Gemstar account and automatically download the new titles.

The bottom part of the menu under the Bookshelf icon includes links to settings and information about your REB1100. The two options are:

Settings: This is the place to change most of the things that can be changed in the REB1100. The options are:

Small Print/ Large Print: Toggles the font between small and large. This will only work if you have a title open, but will be set for all books.

Default Paging/ Reverse Paging: Determines which button on the REB1100 acts as the "Page Up" or "Page Down." "Default Paging" makes the top button "Page Down" and the bottom button "Page Up." "Reverse Paging" does the opposite.

Backlight: Controls the amount of light in the background. The default setting is 60%. The less backlight you use, the less battery power is consumed. To change this, choose the new setting, and then click "Done."

Contrast: Controls how dark the text and background appear. To change the setting, move the slider to the left (lighter) or right (darker) by dragging your stylus. Click "Done" to save the changes.

Auto Shutoff: Controls how long the REB1100 can be idle before shutting off. The amount can be set from 5 minutes to 75 minutes, or never. 10 minutes is the default. Drag the slider to select the time, and then click "Done" to save your changes.

Date & Time: To adjust the date or time, click on the piece of the date or time to adjust (month, day, or year, for example) and then click on the up/down arrow to the right of the displayed time or date. Click "Done" to save your changes.

Modem: Controls settings related to the modem. Choose your dialing prefix from the list at the top. If you need a different prefix, choose "Custom option." You can then type or write in a new prefix, and click "OK." Choose "Done" to save your changes.

Click the box next to “I am dialing from a different area code”, if necessary. You can also change some advanced settings, like specifying pulse dialing, if needed.

Passcode: Used to set the password to protect your billing information.

To set your passcode:

 
1. Click on the Passcode menu option.
2. Click the “Enter New Passcode” button.
3. Type or write in your passcode and say “OK.”
4. Check the box next to “Use Passcode for purchase protection.”
5. Click the “Done” button.

If you forget your passcode, you can erase it:

1. Choose the Passcode menu item.
2. Click the “Forget” button. This will remove your passcode AND any billing information you have entered into the REB1100. You will then be returned to the beginning passcode screen to start over.

About Your eBook: This menu choice provides you with some information about your eBook, including:

- The version of firmware your REB1100 has installed.
- The serial number of your REB1100.
- How much charge the battery has: Click on the “Details” button to see if your device is currently charging, discharging, or if the charge process is complete.
- How much free memory available: Click on the “Details” button to see the total amount of memory on the ebook and how much you have free.
- The eBook ID: This is the ID number you will need to use when purchasing titles.
- The date and time.



The Audio Icon

At this time, the Audio Icon doesn't do anything.



The Book Icon

Use the book icon to perform tasks in the currently displayed eBook. The menu choices are:

Lookup: Use this to lookup a word in the text in the Random House Webster's dictionary.

To use this feature:

1. Choose "Lookup."
2. Click on the word to look up.
3. The definition will appear. Click "New Word" to define another word, or "Done" to exit the dictionary.

Underline: Underlines words in the text.

To do this:

1. Click "Underline."
2. Drag or click the stylus on the words to underline.
3. Click "Done" to stop underlining.

Add Note: Use this to add annotations to your eBook title.

To add a note:

1. Click "Add Note"
2. Type or write your message.
3. Click "OK" when done.
4. A message will appear at the bottom of the screen telling you to select the location for the note. Click on the word you would like the note attached to. A small triangle will appear to the right of the word you chose.

If you would like to view, move, edit or delete your note, click on the small triangle, and a menu with these options will appear.

Set Bookmark: Your eBook title will always stay open to where you left it. You can use this feature to set other bookmarks in your title to move to.

To set a bookmark:

1. Click on "Set Bookmark."
2. You will receive a message to select the paragraph. Click on the word where you want the bookmark to link to. A small arrow will appear on the left-hand edge in the line where you clicked. Note: Even though the arrow appears at the beginning of the line, the text of the bookmark will begin with the word you chose.

If you would like to move, edit, or delete your bookmark, click on the small triangle, and a menu with these options will appear.

Bookmarks: This option allows you to jump to bookmarks you've set and edit them. The "Bookmarks" submenu has two parts. The top part of the menu will list all of the Bookmarks available in this title. Click on any bookmark to move to it. The bottom part contains the "Edit Bookmarks" command.

To edit a bookmark:

1. Click on "Edit Bookmarks."
2. Choose the bookmark you would like to change.
3. Click on "Edit."
4. Type or write the text you would like to appear in your bookmark.
5. Click "OK" to save the changes.
6. Click "Done" to return to your title.

You can also delete or move to a bookmark from the "Edit Bookmarks" window.

Go To: The "Go To" menu item has two sub-items:

Find: This allows you to find text within the currently open book.

To search for a word or phrase:

1. Click "Find."
2. Type or write the word to find.
3. Choose what part of the eBook that you want to search: text, notes that you've added, underlined areas, or bookmark descriptions.
4. Click either the "Forward" or "Back" button to begin your search.
5. After the text has been found, choose "New Find" to find a different word, "Forward" to find the same text again moving forward through the text, "Back" to find the same text again moving backwards through the text, or "Done" to exit the Find function.

First Page: This will move you to the first page of a title.

If the book you are viewing contains a Table of Contents, a "Table of Contents" choice will also appear in this menu. Click on it to move to the Table of Contents.

Previous location: This menu choice moves you to where you were in the book before taking some action, such as moving to a bookmark or going to the first page.

About This Edition: Choosing this menu item will give you the following information about the title you are reading:

- Title
- Author
- ISBN
- The number of underlines in the title
- The number of notes in the title
- The number of bookmarks in the title.

You can also remove all the markups from the title by clicking the “Remove Markups” button.

Click the “Done” button to exit this window.



The Shortcut icon

This icon is for you to configure! You can link any menu item to it.

To configure the shortcut:

1. Open the menu with the item you want the shortcut to point to. Don't choose that item yet!
2. Click on the “Shortcut” icon. A message will appear telling you to click on the menu item to assign to the shortcut.
3. Click on the menu item you want the shortcut icon to link to.
4. The shortcut will change, and the icon will appear next to the menu choice you selected.

By default, this icon is linked to the “Passcode” menu item.